


REMOTE CONTROL USER'S GUIDE CONTROL REMOTO: GUÍA DEL USUARIO

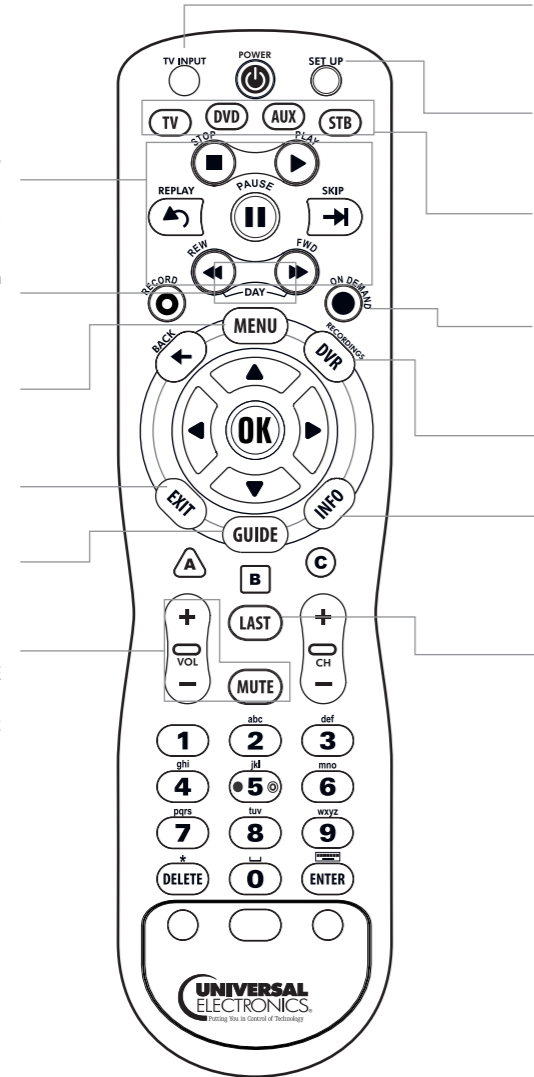

Used to cycle through video inputs on TV or Audio Receiver Se utiliza para recorrer las entradas de video ajustadas en el TV o Receptor de Audio

Used to enter remote control SETUP Se utiliza para ingresar a la CONFIGURACIÓN del control remoto

Remote controls the device related to whichever mode key was last pressed El remoto controla el equipo relacionado a la tecla de modo pulsada por última vez

Accesses ON DEMAND program library Accede a la biblioteca de programas A DEMANDA

Displays a LIST of recorded programs Muestra una LISTA de los programas grabados

Displays INFO for currently selected program Muestra INFORMACIÓN sobre el programa seleccionado

Returns to LAST channel you were watching Vuelve al ÚLTIMO canal que estuvo mirando

Controls PLAYBACK of live and recorded TV Controla la REPRODUCCIÓN de TV en vivo y grabada

Used in the program guide for PAGE and DAY navigation Se utiliza en la guía de programas para navegar por las PÁGINAS y los DÍAS

Displays main cable MENU Muestra el MENÚ principal para cable

EXITs current menu and returns to current program SALE del menu en curso y vuelve al programa en curso

Displays program GUIDE Muestra la GUÍA de programas

Controls and MUTES TV VOLUME Controla y SILENCIA EL VOLUMEN DEL TELEVISOR

www.urcsupport.com

Setup Method A: Popular Brands

Configuración - Método A: Marcas famosas

1 Press and hold SETUP until mode key blinks twice. Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.

2 Press the mode key for device you wish to setup. The mode key stays lit. Presione la tecla de modo para el equipo que desee configurar. La tecla de modo permanece encendida.

3 Find your device and brand from the charts below and note the DIGIT key assigned to your brand. Press and hold down the DIGIT key for your device/brand. Busque su equipo y marca en las tablas que figuran a continuación y observe el código de DÍGITO (Digit) asignado a su marca. Presione y mantenga presionada la tecla DIGIT (DÍGITO) que corresponda a su equipo/marca.

4 Let go of the key when your device turns off. Setup for that device is complete. Suelte la tecla cuando su equipo se apague. La configuración para ese equipo se ha completado.



If your brand does not appear in the brand chart, perform setup using either DIRECT CODE ENTRY or CODE SEARCH. Si la marca que utiliza no aparece en la tabla de marcas, realice la configuración utilizando ya sea ENTRADA DIRECTA DE CÓDIGO O BÚSQUEDA DE CÓDIGO.

Primeros Pasos

Note/Nota: Make sure all home theater equipment is ON before starting remote control setup. Asegúrese de que todo el equipo de cine en casa (home theater) esté ENCENDIDO (ON) antes de comenzar la configuración del control remoto.

1 Remove battery cover. Retire la tapa del compartimiento de pilas.

2 Insert 2 AA batteries. Match the + and - marks. Coloque 2 pilas AA. Haga coincidir las marcas "+ y -".

3 Replace battery cover. Vuelva a colocar la tapa del compartimiento de pilas.

Tip/Consejo: The Mode Key will blink 5 times with each key-press when batteries need replacement. La tecla de Modo parpadeará 5 veces con cada pulsación de tecla cuando sea necesario reemplazar las pilas.

Configuración - Método B: Configuración del Control de TV utilizando Entrada Directa de Código

1 Press the TV mode key. Presione la tecla de modo TV.

2 Press and hold SETUP until TV mode key blinks twice. Presione y mantenga presionada la tecla SET UP (Configurar) hasta que el modo TV parpadee dos veces.

3 Enter 1st TV code for your TV brand from the code list. Ingrese el primer código de TV que corresponda a la marca de su TV de la lista de códigos.

4 Press the power button to test TV control. If the TV turns off, setup is complete. Presione el botón de encendido/apagado para probar el control del Televisor. Si el televisor se apaga, la configuración se ha completado.

5 If the TV does not turn off, repeat process using the next code for your TV brand. Si el televisor no se apaga, repita el proceso utilizando el próximo código para la marca de su TV.

Codes: TV

Table listing TV codes for various brands including Accurian, Action, Admiral, Advent, Aiko, Aiwa, Akai, Akura, Albatron, Alifide, America Action, Anam, AOC, Aomni, Apex Digital, Astar, Audinac, Audiovox, Aventura, Axion, Baysonic, Bell & Howell, BenQ, BGH, Blue Sky, Boigle, Bradford, Brilliant, Broksonic, Bydsign, Candle, Carnivale, Carver, Casio, CCE, Celebrity, Celera, Champion, Changhong, Cincoral, Citizen, Clarion, Coby, Commercial Solutions, Concerto, Conia, Contec, Continental, Coradir, Craig, Cromia, Crosley, Crown, Crown Mustang, Curtis, Curtis Mathes, CXC, Cytron, Daenyx, Daewoo, Daytron, Dell, Denon, Diamond Vision, Digistar, Digital Lifestyles, Disney, Drear, DSE, Dumont, Durabrand, Dynex, Electroband, Electrograph, Electrohome, Elektra, Element, Emerson, Emprex, Encross, Envision, Epson, ESA, Firstline, Fisher, Fluid, Fujimaro, Fujitsu, Fujitsu Siemens, Funai, Futuretech, Hannspree, Gateway, GE, General Electric, GFM, Gibraltar, Global Home, Go Video, GoldStar, Gradiente, Grundig, Grunpy, H & B, Haier, Hallmark, Hanns.G, Hannspree, Harley, Davidson, Harman/Kardon, Harvard, Havermy, Helios, Hello Kitty, Hewlett Packard, Himitsu, Hisense, Hitachi, Hitech, HP, Hyundai, In-nc, ilo, Infinity, Initial, Innova, Insignia, Inteq, IRT, ITT Nokia, JX, JBL, JCB, JCM, Jensen, JVC, KDS, KEC, Ken Brown, Kenia, Kenwood, Kioto, KLH, Konka, Kost, Kreisen, KTV, LG, Lloyd's, Loewe, Loxum, LXI, Lynx, M&S, MAG, Magnavox, Marantz, Matsushita, Maxent, Megatron, Memorex, MGA, Midland, Mintek, Mitsubishi, Monivision, Motorola, MTC, Multitech, Mx Onda, NAD, Naxa, NEC, Netsat, NetTV, NEX, Nexus Electronics, Nikko, Nimbro, Noblex, Nokia, Norcent, Norwood Micro, NTC, Nu-Tec, NuVision, Olevia, Onwa, Optimus, Optoma, Optonica, Orion, Otic, Packard Bell, Panasonic, Panavox, PARK, Penney, Pettters, Philco, Philips, Pioneer, Planar, Polaroid, Portland, Precision, Prima, Prisma, Proscan, Proton, Proview, Pulsar, Punktal, Pye, Pyle, Quasar, RadioShack, RCA, Realistic, RevolutionHD, Runcio, Sampo, Samsung, Sansel, Sansui, Sanyo, Sceptre, Scotch, Scott, Sears, Semivox, Semp, Sense, Serie Dorada, Sharp, Sheng Chia, Sherwood, Siam, Signature, Signet, SKY, Skyworth, Sole, Sony, Soundesign, Sova, Soyo, Space Tek, Spectroniq, Squareview, SSS, Starlite, Studio Experience, SunBriteTV, Superscan, Supersonic, Supreme, SVA, Sylvania, Symphonic, Syntax, Tahoci, Talent, Tandy, Tatung, TCL, Technics, Techwood, Teknika, Telefunken, Thomas, TMK, TNCI, Tophouse, Toshiba, TruTech, TVS, US Logic, Vector Research, Venturer, VEOS, Victor, Vidikron, Vidtech, Viewsonic, Viore, Visart, Vizio, Wards, Waycon, Westinghouse, White Westinghouse, Winco, Wyse, Xion, Yamaha, Zenith.

Códigos: TV

Table listing TV codes for various brands including Accurian, Action, Admiral, Advent, Aiko, Aiwa, Akai, Akura, Albatron, Alifide, America Action, Anam, AOC, Aomni, Apex Digital, Astar, Audinac, Audiovox, Aventura, Axion, Baysonic, Bell & Howell, BenQ, BGH, Blue Sky, Boigle, Bradford, Brilliant, Broksonic, Bydsign, Candle, Carnivale, Carver, Casio, CCE, Celebrity, Celera, Champion, Changhong, Cincoral, Citizen, Clarion, Coby, Commercial Solutions, Concerto, Conia, Contec, Continental, Coradir, Craig, Cromia, Crosley, Crown, Crown Mustang, Curtis, Curtis Mathes, CXC, Cytron, Daenyx, Daewoo, Daytron, Dell, Denon, Diamond Vision, Digistar, Digital Lifestyles, Disney, Drear, DSE, Dumont, Durabrand, Dynex, Electroband, Electrograph, Electrohome, Elektra, Element, Emerson, Emprex, Encross, Envision, Epson, ESA, Firstline, Fisher, Fluid, Fujimaro, Fujitsu, Fujitsu Siemens, Funai, Futuretech, Hannspree, Gateway, GE, General Electric, GFM, Gibraltar, Global Home, Go Video, GoldStar, Gradiente, Grundig, Grunpy, H & B, Haier, Hallmark, Hanns.G, Hannspree, Harley, Davidson, Harman/Kardon, Harvard, Havermy, Helios, Hello Kitty, Hewlett Packard, Himitsu, Hisense, Hitachi, Hitech, HP, Hyundai, In-nc, ilo, Infinity, Initial, Innova, Insignia, Inteq, IRT, ITT Nokia, JX, JBL, JCB, JCM, Jensen, JVC, KDS, KEC, Ken Brown, Kenia, Kenwood, Kioto, KLH, Konka, Kost, Kreisen, KTV, LG, Lloyd's, Loewe, Loxum, LXI, Lynx, M&S, MAG, Magnavox, Marantz, Matsushita, Maxent, Megatron, Memorex, MGA, Midland, Mintek, Mitsubishi, Monivision, Motorola, MTC, Multitech, Mx Onda, NAD, Naxa, NEC, Netsat, NetTV, NEX, Nexus Electronics, Nikko, Nimbro, Noblex, Nokia, Norcent, Norwood Micro, NTC, Nu-Tec, NuVision, Olevia, Onwa, Optimus, Optoma, Optonica, Orion, Otic, Packard Bell, Panasonic, Panavox, PARK, Penney, Pettters, Philco, Philips, Pioneer, Planar, Polaroid, Portland, Precision, Prima, Prisma, Proscan, Proton, Proview, Pulsar, Punktal, Pye, Pyle, Quasar, RadioShack, RCA, Realistic, RevolutionHD, Runcio, Sampo, Samsung, Sansel, Sansui, Sanyo, Sceptre, Scotch, Scott, Sears, Semivox, Semp, Sense, Serie Dorada, Sharp, Sheng Chia, Sherwood, Siam, Signature, Signet, SKY, Skyworth, Sole, Sony, Soundesign, Sova, Soyo, Space Tek, Spectroniq, Squareview, SSS, Starlite, Studio Experience, SunBriteTV, Superscan, Supersonic, Supreme, SVA, Sylvania, Symphonic, Syntax, Tahoci, Talent, Tandy, Tatung, TCL, Technics, Techwood, Teknika, Telefunken, Thomas, TMK, TNCI, Tophouse, Toshiba, TruTech, TVS, US Logic, Vector Research, Venturer, VEOS, Victor, Vidikron, Vidtech, Viewsonic, Viore, Visart, Vizio, Wards, Waycon, Westinghouse, White Westinghouse, Winco, Wyse, Xion, Yamaha, Zenith.

